




spikenziels.com

Blinky Robot Badge Assembly Guide


You will need a soldering iron, snips, safety glasses and solder.



Wear safety glasses!

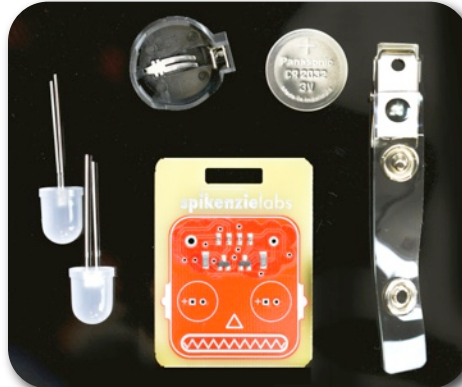

Place the battery holder over the back of the PCB. Match the white printing with the shape of the holder. Hold with tape if needed.

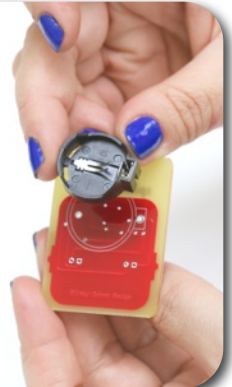


Solder both pins




Snip the ends of both pins. Careful not to scratch the PCB.




Insert both LEDs. The longer leg for each goes through the hole marked (+).

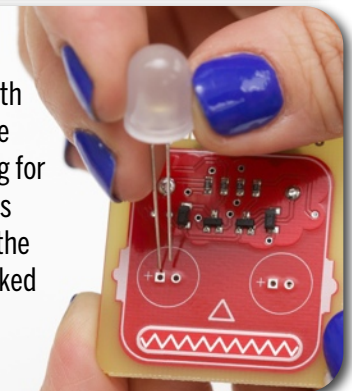

Flare out the legs, to hold the LEDs in place.

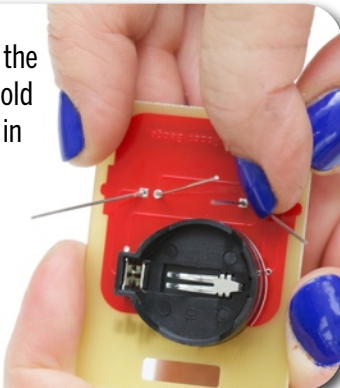


Solder all four legs.

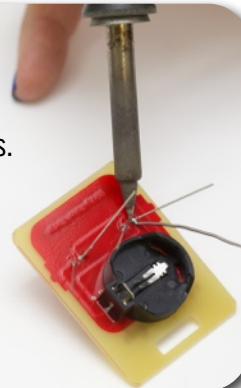

Snip the ends of all four legs.

Be careful not to scratch the PCB.

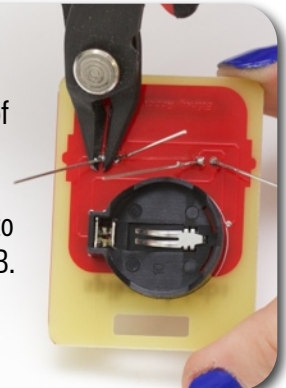

Slide the clip through the slot, and fasten the snap.



Install the battery, with the 'writing side up'



Clip it to your shirt.



Caution: Small parts choking hazard. Adult supervision required. Keep battery away from children. If swallowed, consult a physician at once.